


Model

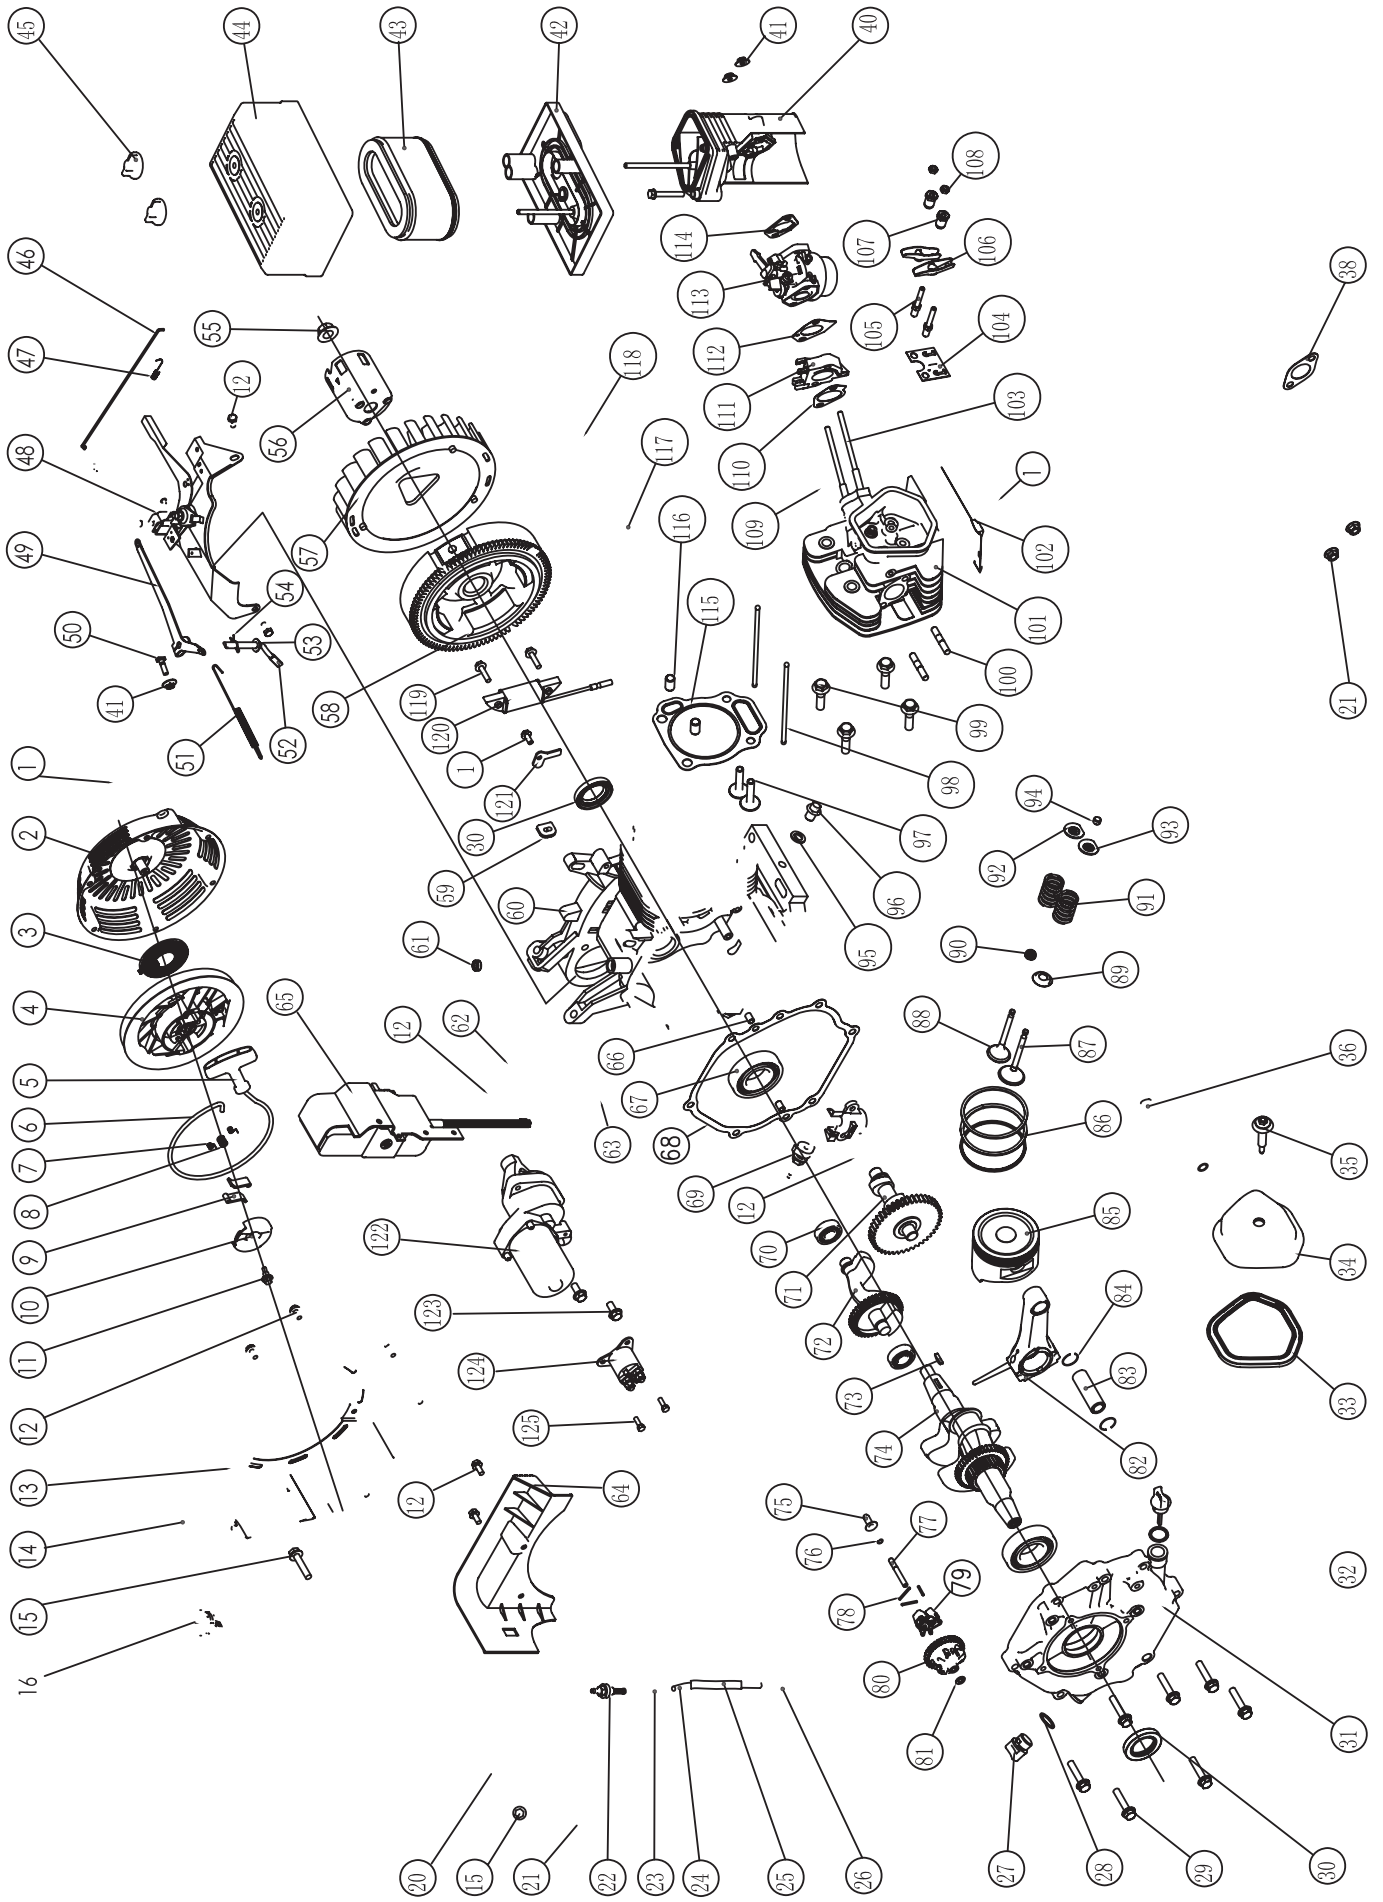

Gasoline Engine Parts

Ref. No.	Part No.	Description	Qty.	Note
1	GB5789-86	Screw M6x8 □□M6X8	8	
2	SF188F-1060100-C	Recoil starter case □□□□□	1	
3	SF188F-1060009	Recoil starter spring □□□□	1	
4	SF188F-1060008	Drum sheave □□□	1	
5	SF188F-1061006	Rope handle □□	1	
6	SF188F-1060007	Rope □□	1	
7	SF188F-1060006	Pawl spring □□□□	2	
8	SF188F-1060004	Pawl guide spring □□□□	1	
9	SF188F-1060005	Pawl □□	2	
10	SF188F-1060003	Pawl guide □□	1	
11	SF188F-1060002	Pawl guide Setting screw □□□□	1	
12	GB5789-86	Screw M6x12 □□M6X12	9	
13	SF188F-1080100-C	Fan case □□□□□	1	
14	139FMD-1009301	Fan case Rubber plug □□□□□	1	
15	GB5789-86	Screw M8x28 □□M8X28	2	
16	SF188F-1070200-C	Fuel meter □□□□□	1	
17	SF160F-1070100	Fuel tank cap □□□	1	
18	SF160F-1070006	Fuel filter □□□	1	
19	SF188F-1071000-C	Fuel tank □□	1	
20	SF188F-1070100-C	Fuel tank support □□□□□	1	
21	GB6177-86	Nut M8 □□M8	3	
22	SF160F-1070300	Fuel outlet joint □□□□	1	
23	SF160F-1070001	Fuel hose clip □□□□□	1	
24	SF188F-1070001	Fuel hose □□□	1	
25	SF160F-1070003	Fuel hose protector □□□□□□	1	
26	SF160F-1070001	Fuel hose clip □□□□□□	1	
27	SF160F-1030005	Oil filling plug □□□	1	
28	SF160F-1030002	Oil filling plug seal □□□□□□□□	2	
29	GB5789-86	Screw M8x40 □□M8X40	7	
30	SF188F-1030200	Oil seal □□□□□□□	2	
31	SF188F-1030011	Crankcase cover □□□□	1	
32	SF188F-1030003	Oil gauge □□□	1	
33	SF188F-1020003	Cylinder head cover gasket □□□□□□	1	
34	SF188F-1020100	Cylinder head cover assembly □□□□□□	1	
35	SF188F-1020006	Cylinder head cover screw □□□□□□□□	1	
36	SF188F-1020002	Breather tube □□□□	1	
37	SF188F-1101000-C	Muffler □□□□□	1	
38	SF188F-1100100	Exhaust gasket □□□□□	1	
39	SF188F-1100100-C	Muffler cover □□□□	1	
40	SF188F-1090500-C	Air cleaner base □□□□□□□	1	

Gasoline Engine Parts List

.c

Ref No.	Part No.	Description	Qty	Note
41	GB6177-86	Nut M6	□□ M6	3
42	SF188F-1090300-C	Air cleaner element support	□□□□□□	1
43	SF188F-1090200-C	Air cleaner element	□□	1
44	SF188F-1090001-C	Air cleaner cover	□□□□	1
45	SF188F-1090100-C	Air cleaner cover nut	□□□□□□	2
46	SF188F-1110002	Carburetor connecting rod	□□□□	1
47	SF188F-1110001	Carburetor spring	□□□	1
48	SF188F-1080200-C	Throttle control rack	□□□□□	1
49	SF188F-1110006	Governing arm	□□□	1
50	SF160F-1110004	Governing arm screw	□□□□□	1
51	SF188F-1110004	Governing spring	□□□□	1
52	SF188F-1110003	Governing shaft	□□	1
53	SF188F-1110005	Governing shaft washer	□□□□	1
54	SF188F-1110007	Cotter pin	□□□	1
55	SF188F-1050006	Flywheel nut	□□□□	1
56	SF188F-1060001	Starting hub	□□□	1
57	SF188F-1080002	Cooling fan	□□	1
58	SF188F-1121000	Flywheel	□□□□	1
59	SF188F-1030012	Wire bush	□□	1
60	SF190F-1030006	Crankcase	□□□□	1
61	SF188F-1030100	Governing shaft Oil seal	□□□□□□□	1
62	SF160F-1126000	Diode	□□□□□	1
63	SF188F-1030001	Wiring clip	□□	1
64	SF188F-1120001-C	Plastic cover	□□	1
65	SF188F-1127000	Control on-off	□□□□□□□	1
66	139FMD-1003003	Crankcase gasket Dowel pin	□□□□□□□	2
67	GB/T276-94 6207/C3	Ball bearing	□□	2
68	SF188F-1030010	Crankcase gasket	□□□□	1
69	SF188F-1127000	Oil level sensor	□□□□□	1
70	GB/T276-94	Ball bearing	□□	2
71	SF188F-1041000	Camshaft assembly	□□□□□	1
72	SF188F-1050303	Balance shaft	□□□□	1
73	SF188F-1050304	Crankshaft key	□□□	1
74	SF188F-1050301	Crankshaft assembly	□□	1
75	SF188F-1110008	Governing gear shaft Collar	□□□□□□	1
76	SF160F-1110103	Governing gear shaft circlip	□□□□□□□	1
77	SF188F-1110009	Governing gear shaft	□□□□□	1
78	SF188F-1110102	Flyweight pin	□□□□	3

Gasoline Engine Parts List

Ref No.	Part No.	Description	Qty	Note
79	SF188F-1110103	Flyweight	3	
80	SF188F-1110101	Governing gear	1	
81	SF160F-1110106	Governing gear washer	1	
82	SF188F-1050200	Connecting rod assembly	1	
83	SF188F-1050005	Piston pin	1	
84	SF188F-1050004	Piston pin circlip	2	
85	SF190F-1050001	Piston	1	
	SF190F-1050100	Oil ring set	1	
86	SF190F-1050003	Second piston ring	1	
	SF190F-1050002	First piston ring	1	
87	SF188F-1040011	Exhaust valve	1	
88	SF188F-1040003	Intake valve	1	
89	SF188F-1040006	Exhaust valve spring washer	1	
90	SF188F-1040004	Intake valve oil seal	1	
91	SF188F-1040007	Valve spring	2	
92	SF188F-1040002	Intake valve spring retainer	1	
93	SF188F-1040008	Exhaust valve spring retainer	1	
94	SF188F-1040009	Exhaust valve cap	1	
95	139FMD-1003102	Drain plug washer	2	
96	139FMD-1003101	Drain plug	2	
97	SF188F-1040012	Valve lifter	2	
98	SF188F-1040010	Push rod	2	
99	SF188F-1030009	Cylinder head bolt	4	
100	SF188FD-1010001	Exhaust bolt	2	
101	SF188F-1011000	Cylinder head assembly	1	
102	SF188F-1080001	Air shroud	1	
103	SF188F-1010002	Intake bolt	2	
104	SF188F-1040005	Push rod guide	1	
105	SF160F-1040010	Rocker arm bolt	2	
106	SF188F-1040001	Rocker arm	2	
107	SF160F-1040012	Rocker arm seat	2	
108	SF160F-1040011	Valve clearance adjusting nut	2	
109	NHSP LA F5TC	Spark plug	1	
110	SF188FD-1130003	Carburetor insulator gasket	1	
111	SF188F-1130001	Carburetor insulator	1	
112	SF188FD-1130002	Carburetor gasket	1	
113	SF188F-1131000	Carburetor	1	
114	SF188F-1130100	Air cleaner gasket	1	
115	SF190F-1030008	Cylinder gasket	1	
116	SF188F-1030013	Cylinder gasket Dowel pin	2	

Gasoline Engine Parts List

Ref No.	Part No.	Description	Qty	Note
117	SF188F-1122000	T.C.I. Unit	1	
118	GB5789-86	Screw M6x29	2	
119	GB5789-86	Flange boltM6x29	2	
120	SF188F-1123000	Electrifg coil	1	
121	SF188F-1030002	Wire flat	1	
122	SF188F-1125000	Start motor	1	
123	GB5789-86	Flange boltM8x35	2	
124	SF188F-1126000	relay	1	
125	GB29.2-88	Flange boltM5x20	2	
	GB93-87	Spring gasket	2	